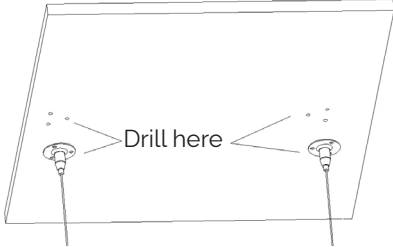
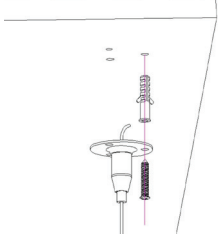
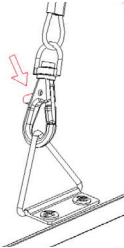
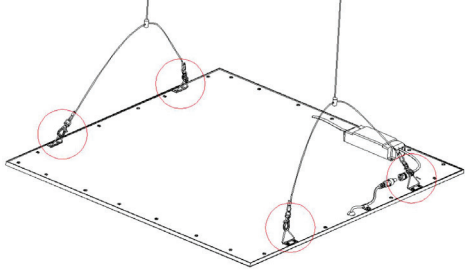
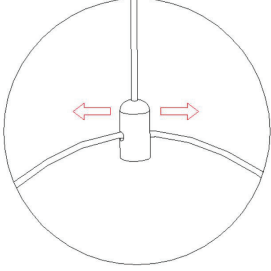
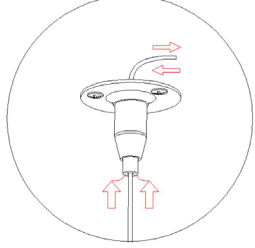


Core Plus Suspension Kit (RE36)

INSTALLATION INSTRUCTIONS

Before following these steps please ensure you have read and adhered to the guidelines and information overleaf. Remove the product from the box and inspect it for any damage. If the luminaire is in a good condition, proceed with installation.

<p>STEP 1</p> <p>Ensure power is turned off. Drill six 6mm holes into the ceiling for the two suspension points. Insert wall plugs into the holes.</p> 	<p>STEP 2</p> <p>Insert the M4 screw into the Ceiling Suspension Fixture and screw into the raw plug that sits in the ceiling. (X2).</p> 
<p>STEP 3</p> <p>Screw the four fixing points into the panel</p> 	<p>STEP 4</p> <p>Secure the suspension kit onto the four panel fixing points</p> 
<p>STEP 5</p> <p>Slide the suspension wire through the fixing point to ensure the panel is level</p> 	<p>STEP 6</p> <p>Slide the Suspension Cable through the Ceiling Suspension Cap and Screw the Ceiling Suspension Cap into the Ceiling Suspension Point</p> 
<p>STEP 7</p> <p>Adjust the suspension cable to the desired lengths. Installation is complete.</p> 